

Note!

Please note that this image is a general representation of the product and may differ slightly from your product.

Note!

Please note that during storage and transportation, especially at high ambient temperature, some of the oil and grease used for assembling may leak and stain the packaging. This is in no way detrimental to the product, wipe off the excessive oil/grease with a cloth.

Note!

Before installing this product, check the contents of the kit. If anything is missing, please contact an Öhlins dealer

Description	Part No	Pcs	
Shock absorber	HO 545	1	
Washer 15/28/2	60426-02	1	
Screw M8x35	00432-01	1	
Sticker Öhlins	00192-01	2	
Sticker Öhlins	01185-01	2	
Sticker Öhlins	01185-04	2	
C-spanner	60710-01	2	
Owner's manual	07241-02	1	
Kit for Honda Click125-2013			
Spring	60360-09	1	
Sleeve 10/13.9/20	61123-07	1	
Index	Page		
Click125 2015	2-10		
Click125 2013	11-13		

Warning!

Before installing this product, read the Öhlins Owner's Manual. The shock absorber is an important part of your vehicle and will affect the stability.

Shock Absorber for Honda Click125-2015/2013



Mounting Instructions



Warning!

It is advisable to have an Öhlins dealer install the shock absorber.

Warning!

If working on a raised vehicle, ensure it is securely supported so that it will not tip over.

HONDA Click 2015

1


Put the motorcycle on center stand so that the rear wheel barely touches the ground. Make sure the motorcycle is in a stable position.


Note!


Before mounting this product clean the vehicle thoroughly.


Note!

When working on this product, always see the Vehicle Service Manual for vehicle specific procedures and important data.

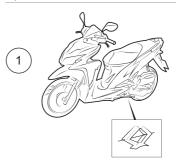

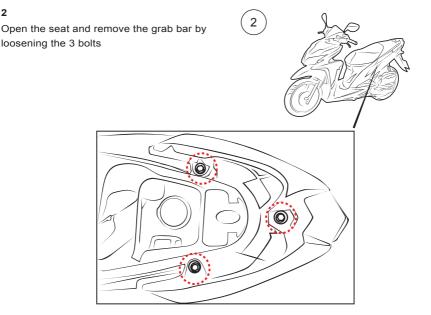

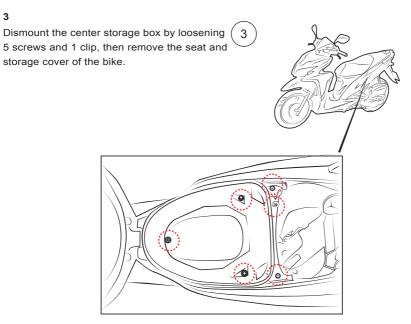

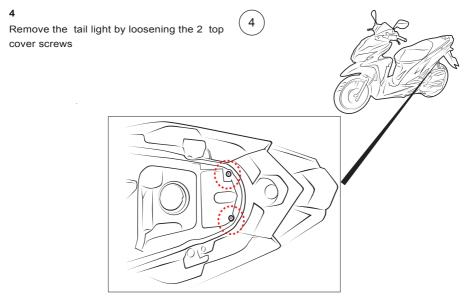



5 Remove the 2 tail light cover screws.



6

Unplug the light wiring connector in order to remove the tail light cover.

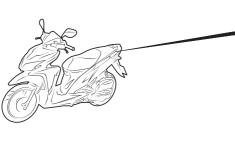

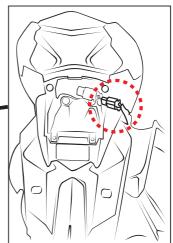


6

7 7 Loosen 2 screws then remove the seat lower plastic cover. 8-1 8 Remove the plastic fearings together with the lamp : 8-1 Remove the right and left plastic push clip.


8-2 Remove the 2 screws (left and right fearing)






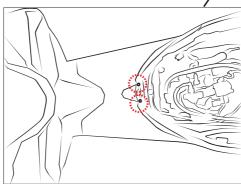


8-3 Remove 2 screws (left and right),(under the fearing)

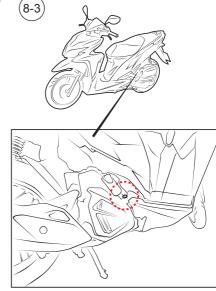

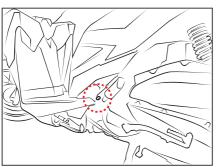


8-4 Remove 2 screws (left and right),under the rear light and unplug the rear light wiring.

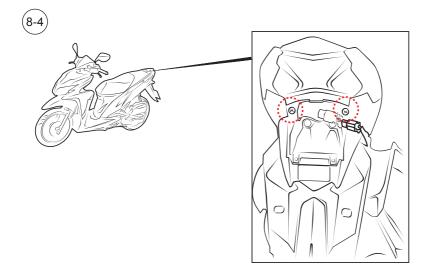

9


Move the fuel tank by loosening 5 screws in order to access to the top mounting screw of the shock absorber.

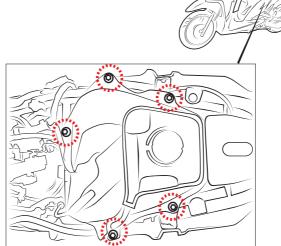

9


10

Remove the top mounting nut together with the washer.

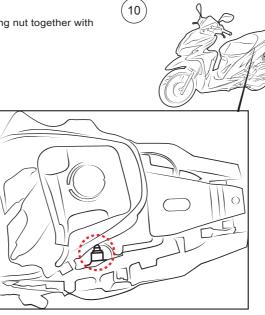


11


Remove the bottom screw then remove the standard shock absorber.

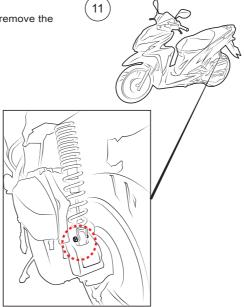

12

Release the rear fender by : 12-1 Loosening 2 lateral screws.

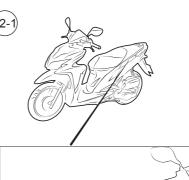


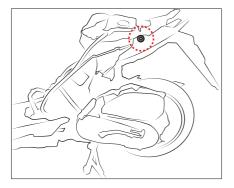



12-2.Remove 2 rear screws.

in order to install the Öhlins shock absorber.

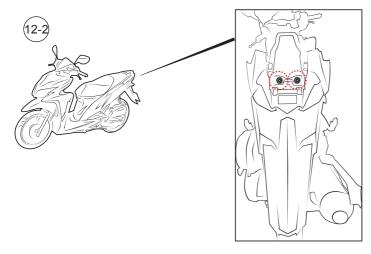


13.

Install the Öhlins shock absorber :


- Top nut : Insert in position the shock absorber, then the washer 60426-02, then the standard washer, and finally tighten the nut.


- Bottom screw : Fix in position the shock absorber by using the screw 00432-01.

Tighten at the specific torque value as per Honda service manual and reverse all procedures.

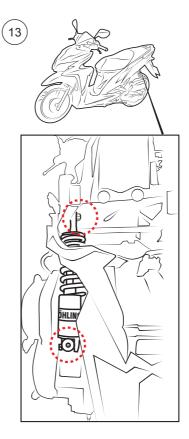

HONDA Click 2013

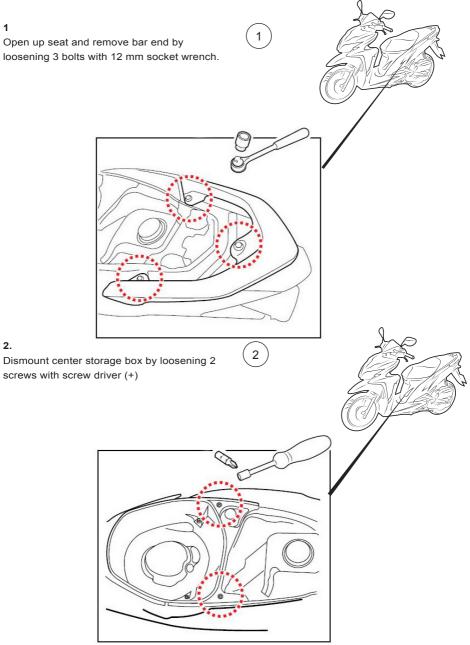

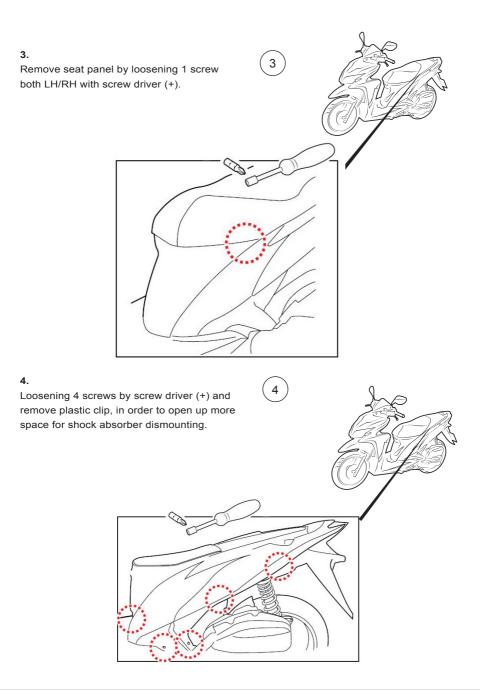

5.

Remove the original shock loosening bolt 12 mm (Bottom) and 14 mm (Top) by socket wrench.

6.

Install the Öhlinhs shock absorber :

- Top : Fit the sleeve 61123-07 into the end-eye bushing and fix it by tightening the nut

- Bottom screw : Fix in position the shock absorber by using the screw 00432-01.


Tighten at the specific torque value as per Honda service manual and reverse all procedures.


Note!

Lower the vehicle so that the suspension is slightly compressed before tightening the screws.

"Caution!

Ensure that all screws are tightened to the correct torque and that nothing fouls or restricts movement of the shock absorber when the suspension is fully compressed or extended.

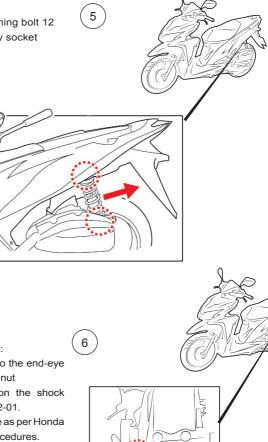


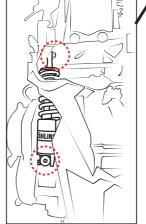

ADJUSTMENTS

Warning!

Before riding, always make sure that the basic settings made by Öhlins are according to recommended Set-up Data. Read about adjustments and setting up in the Öhlins Owner's Manual before you make any adjustments. Contact an Öhlins dealer if you have any questions about setting up.

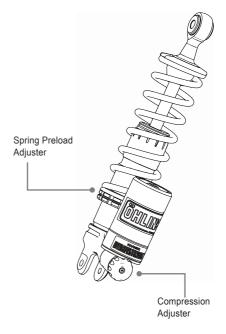

SET-UP DATA

Recommended set-up : C Spring Preload Compression adjuster	5 mm	Shock absorber data : Length Stroke	Click 2015/2013 328 mm 86 mm
Spring Part No	60360-08	60360-09	
Free spring length	200 mm	200 mm	
Spring rate	prog. 31-35 N/mm	prog.22-40 N/mm	

Ohlins products are subject to continuous improvement and development, therefore, although these instructions include the most up-to-date information available at the time of printing, minor updates may occur.

Preload adj. range...... [0-17] mm.

© Öhlins Racing AB. All rights reserved. Any reprinting or unauthorized use without the written permission of Öhlins Racing AB is prohibited. To find the latest information contact an Öhlins distributor. Please contact Öhlins if you have any questions regarding the contents in this document.

[0-19] mm.

Part no. MI_HO545_EN_0 Issued 2016-02-15

Öhlins Racing AB Box 722 SE-194 27 Upplands Väsby, Sweden Phone +46 8 590 025 00 fax +46 8 590 025 80



www.ohlins.com