

Note!

Before installing this product, check the contents of the kit. If anything is missing, please contact an Öhlins dealer.

Kit Contents

Description	Part No	Pcs
Shock absorber	KA110013	1
Sticker Öhlins	00192-01	2
C-spanner	00710-01	1
Owners manual	07241-02	1

Note!

Please note that this image is a general representation of the product and may differ slightly from your product.

Note!

Please note that during storage and transportation, especially at high ambient temperature, some of the oil and grease used for assembling may leak and stain the packaging. This is in no way detrimental to the product, wipe off the excessive oil/grease with a cloth.

Warning!

Before installing this product, read the Öhlins Owner's Manual. The shock absorber is an important part of your vehicle and will affect the stability.

Shock Absorber for Kawasaki Ninja 250

KA110013

Mounting Instructions



MOUNTING INSTRUCTIONS

⚠ Warning!

It is advisable to have an Öhlins dealer install the shock absorber/front fork/steering damper.

⚠ Warning!

If working on a raised vehicle, ensure it is securely supported so that it will not tip.

👁 Note!

Before mounting this product clean the vehicle thoroughly.


👁 Note!

When working on this product, always see the Vehicle Service Manual for vehicle specific procedures and important data.

1

Lean the vehicle toward left with side stand down and working stand support on opposite side, so that the suspension is unloaded and wheel barely touches ground. Need to ensure vehicle is stable.



1

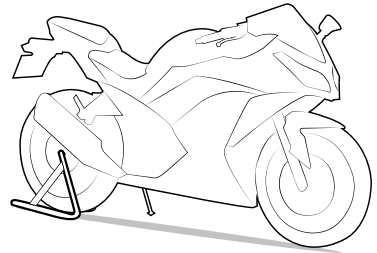

2

Remove plastic cap cover on both left and right side and then remove both bolt and nut. Use 19 mm socket with extension for right hand side and 17 mm for left hand side.

2

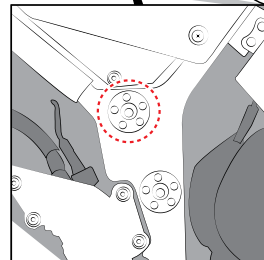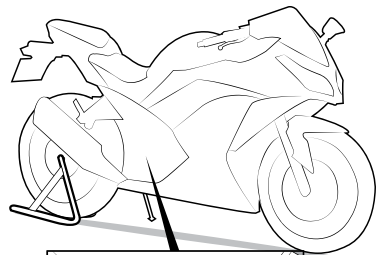

MOUNTING INSTRUCTIONS

3

Remove the bolt and nut using a 19 mm spanner for lower side.

4

Remove original shock absorber.

5



Re-install with Ohlins shock absorber, and reverse previous procedures.

Note!

Lower the vehicle so that the suspension is slightly compressed before tightening the screws.

Caution!


Ensure that all screws are tightened to the correct torque and that nothing fouls or restricts movement of the shock absorber/front fork/steering damper when the suspension is fully compressed or extended.

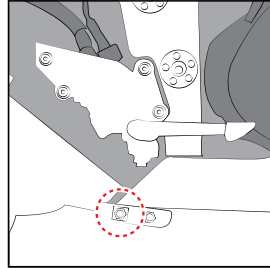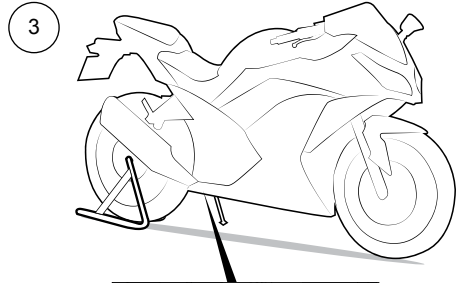

ADJUSTMENTS

⚠ Warning!

Before riding, always make sure that the basic settings made by Öhlins are according to recommended Set-up Data. Read about adjustments and setting up in the Öhlins Owner's Manual before you make any adjustments. Contact an Öhlins dealer if you have any questions about setting up.

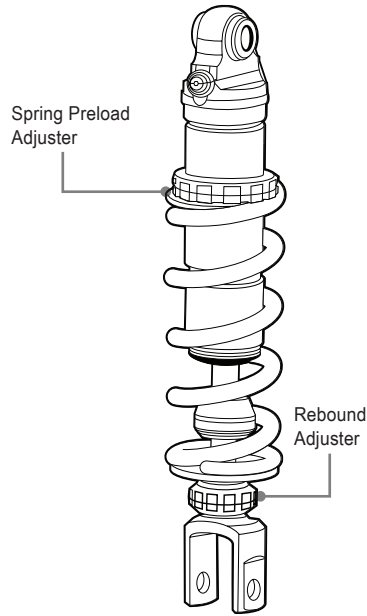

SET-UP DATA

Recommended set-up

Spring Preload 8 mm
Rebound adjuster..... 14 Clicks (Sport)
Rebound adjuster..... 10 Clicks (Racing)

Shock absorber data

Length 320 mm
Stroke 63 mm

Spring

Part No 60281-09
Free spring length 165 mm

👁 Öhlins products are subject to continuous improvement and development, therefore, although these instructions include the most up-to-date information available at the time of printing, minor updates may occur.

To find the latest information contact an Öhlins distributor. Please contact Öhlins if you have any questions regarding the contents in this document.

Part no. MI_KA110013_EN_0
Issued 2014-12-09



© Öhlins Asia Co. Ltd. All rights reserved. Any reprinting or unauthorized use without the written permission of Öhlins Racing AB is prohibited.

Öhlins Asia Co. Ltd
700/937 Moo5, Tambol Nongkhaga,
Amphur Phantong, Chonburi Province
20160 Thailand



www.ohlins.com