

👁 Note!

Before installing this product, check the contents of the kit. If anything is missing, please contact an Öhlins dealer.

Kit Contents

Description	Part No	Pcs
Shock absorber	KA110016	1
Sticker Öhlins	00192-01	2
C-spanner	00710-02	1
Owner's manual	07241-02	1

👁 Note!

Please note that this image is a general representation of the product and may differ slightly from your product.

👁 Note!

Please note that during storage and transportation, especially at high ambient temperature, some of the oil and grease used for assembling may leak and stain the packaging. This is in no way detrimental to the product, wipe off the excessive oil/grease with a cloth.

⚠ Warning!

Before installing this product, read the Öhlins Owner's Manual. The shock absorber is an important part of your vehicle and will affect the stability.

Shock Absorber for Kawasaki ER-6N

KA110016

Mounting Instructions



MOUNTING INSTRUCTIONS

⚠ Warning!

It is advisable to have an Öhlins dealer install the shock absorber.

⚠ Warning!

If working on a raised vehicle, ensure it is securely supported so that it will not tip over.

👁 Note!


Before mounting this product clean the vehicle thoroughly.

👁 Note!

When working on this product, always see the Vehicle Service Manual for vehicle specific procedures and important data.


1

Put motorcycle on stand.

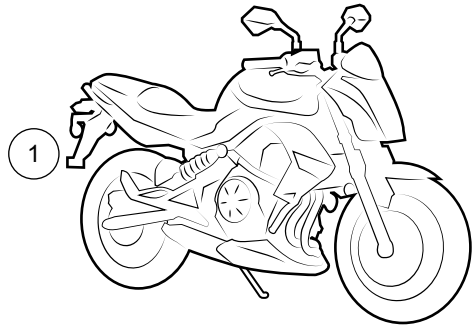

2

Remove the cover's bolt of shock head, by Flat-blade screwdriver. Then remove shock OEM, by loosening 2 bolts of shock with 17 mm socket wrench and 8 mm hexagon.

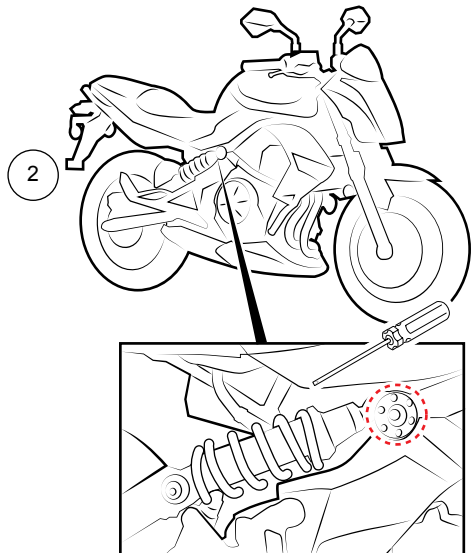


MOUNTING INSTRUCTIONS

3

Install the Öhlins shock absorber with the rebound adjuster towards the front. The thin ball joint spacers shall be on the right side of the vehicle, so that the shock absorber centre is as far to the right as possible. See figure. Raise the rear wheel slightly so that the rear bolt can be installed.

Make sure that all removed parts are re-installed in the same way as they were before the installation of the Öhlins shock absorber.

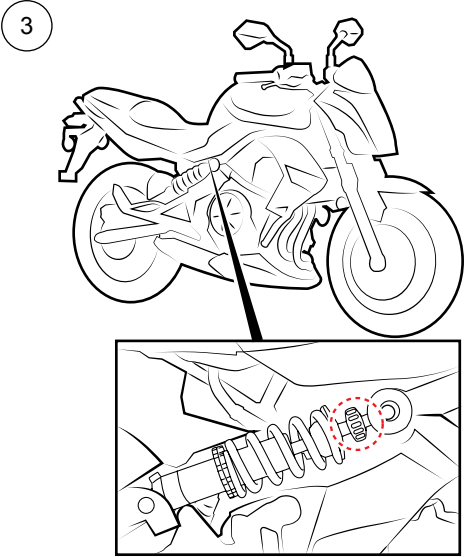

Note!

Lower the vehicle so that the suspension is slightly compressed before tightening the screws.


Caution!

Ensure that all screws are tightened to the correct torque and that nothing fouls or restricts movement of the shock absorber when the suspension is fully compressed or extended.

ADJUSTMENTS

⚠ Warning!

Before riding, always make sure that the basic settings made by Öhlins are according to recommended Set-up Data. Read about adjustments and setting up in the Öhlins Owner's Manual before you make any adjustments. Contact an Öhlins dealer if you have any questions about setting up.

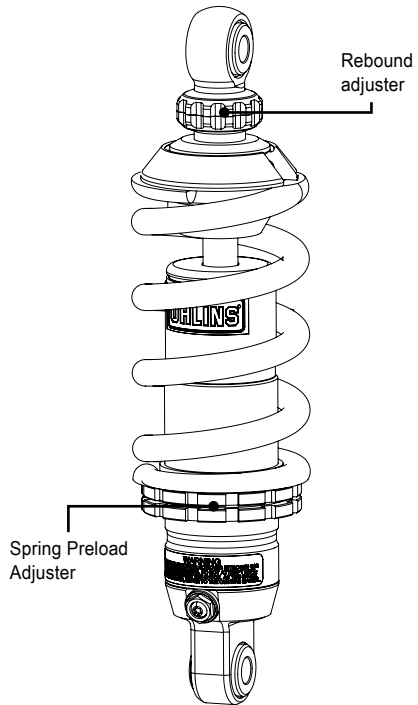

SET-UP DATA

Recommended set-up

Spring Preload 10 mm
Rebound adjuster 16 clicks

Shock absorber data

Length 290 mm
Stroke 49 mm

Spring

Part No 61093-69
Free spring length 150 mm

👁 Öhlins products are subject to continuous improvement and development, therefore, although these instructions include the most up-to-date information available at the time of printing, minor updates may occur.

To find the latest information contact an Öhlins distributor. Please contact Öhlins if you have any questions regarding the contents in this document.

Part no. MI_KA110016_EN_5
Issued 2013-12-12

© Öhlins Asia Co. Ltd. All rights reserved. Any reprinting or unauthorized use without the written permission of Öhlins Racing AB is prohibited.

Öhlins Asia Co. Ltd
700/937 Moo5, Tambol Nongkhaga,
Amphur Phantong, Chonburi Province
20160 Thailand



www.ohlins.com