

Note!

Before installing this product, check the contents of the kit. If anything is missing, please contact an Öhlins dealer

Kit Contents

Description	Part No	Pcs
Shock absorber	YA 657	1
Sticker Öhlins	00192-01	2
Sticker Öhlins	01185-01	2
Sticker Öhlins	01185-04	2
C-spanner	60710-01	2
Owner's manual	07241-02	1

Note!

Please note that this image is a general representation of the product and may differ slightly from your product.

Note!

Please note that during storage and transportation, especially at high ambient temperature, some of the oil and grease used for assembling may leak and stain the packaging. This is in no way detrimental to the product, wipe off the excessive oil/grease with a cloth.

Marning!

Before installing this product, read the Öhlins Owner's Manual. The shock absorber is an important part of your vehicle and will affect the stability.

Shock Absorber for YAMAHA V-ixion 150 / R15 / FZ150 / M-Slaz



Mounting Instructions



Marning!

It is advisable to have an Öhlins dealer install the shock absorber.

▲ Warning!

If working on a raised vehicle, ensure it is securely supported so that it will not tip over.

Note!


Before mounting this product clean the vehicle thoroughly.

Note!

When working on this product, always see the Vehicle Service Manual for vehicle specific procedures and important data.


1

Put the motorcycle on center stand so that the rear wheel barely touches the ground. Make sure the motorcycle is in a stable position.

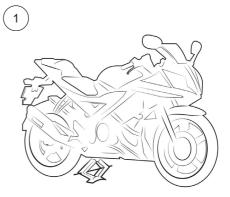


2

Remove the passenger seat by unlocking it with ignition key.

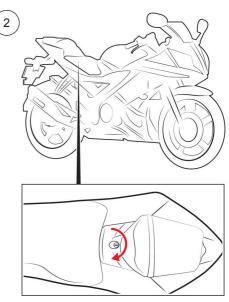


3.

Release the seat cowl by loosening the two screws.

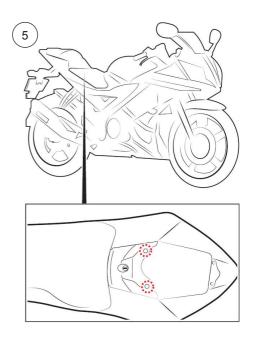


4.

Remove the driver seat by loosening the two bolts.

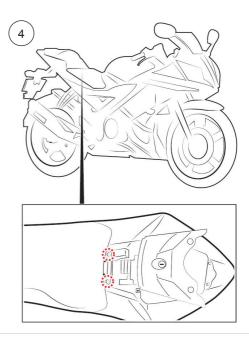


5.


Remove the rear cowl by loosening the two screws.

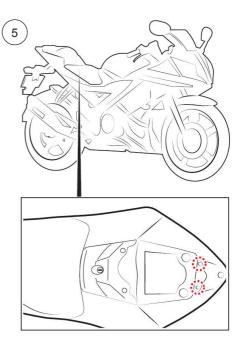

6.

Remove the rear fairing on the right side by loosening the bolt and the screw.

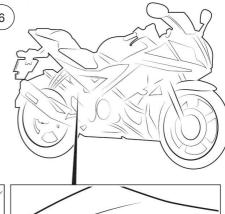






7.


Remove the center faring on the right side by loosenning the three screws.

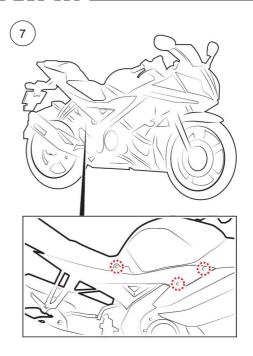


8.

Release the pull rod by loosening the bolt (1). Loosen the lower and the upper mounting bolt of shock absorber (2)(3). Remove the standard shock absorber from the motorcycle.



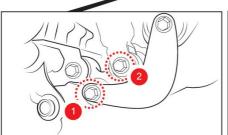



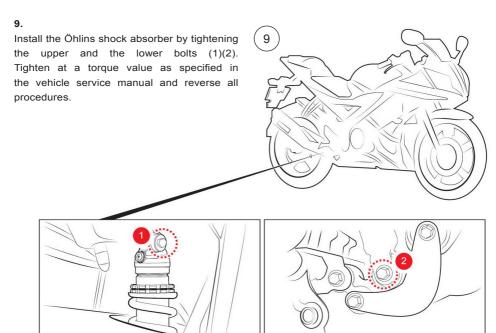

Note!

Lower the vehicle so that the suspension is slightly compressed before tightening the screws.


Caution!

Ensure that all screws are tightened to the correct torque and that nothing fouls or restricts movement of the shock absorber when the suspension is fully compressed or extended.

ADJUSTMENTS

▲ Warning!

Before riding, always make sure that the basic settings made by Öhlins are according to recommended Set-up Data. Read about adjustments and setting up in the Öhlins Owner's Manual before you make any adjustments. Contact an Öhlins dealer if you have any questions about setting up.

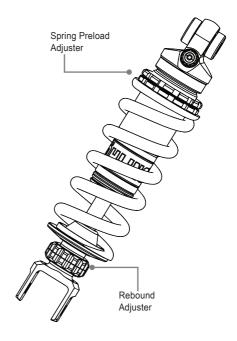

SET-UP DATA

Recommended set-up

Spring Preload 9 mm

Rebound adjuster 16 Clicks

Spring

 Part No
 60282-04

 Free spring length
 155 mm

 Spring rate
 100 N/mm

 Preload adj. range
 [0-19] mm

Shock absorber data

Öhlins products are subject to continuous improvement and development, therefore, although these instructions include the most up-to-date information available at the time of printing, minor updates may occur.

© Öhlins Racing AB. All rights reserved. Any reprinting or unauthorized use without the written permission of Öhlins Racing AB is prohibited.

To find the latest information contact an Öhlins distributor. Please contact Öhlins if you have any questions regarding the contents in this document.

Part no. MI_YA657_EN_0 Issued 2016-05-09

Öhlins Racing AB Box 722 SE-194 27 Upplands Väsby, Sweden Phone +46 8 590 025 00 fax +46 8 590 025 80

